

# LG POWER

User manual

Gaming 993B / 993W – Covertaker



Thank you for purchasing this case from LC-Power.

Please read this manual before usage.

Specifications may be subject to change without prior notice.

## 1. Specification

Size	473 x 215 x 470 mm (h x w x d)
M/B	ATX / micro ATX / mini ITX
HDD	5x 3.5" HDD; 3x 2.5" HDD/SSD
PSU	ATX
Fans	Front: 3x 120 mm Top: 2x 120 mm Inside: 1x 120 mm Back: 1x 120 mm
Water cooling (if no fans are mounted)	Front: 360 mm Top: 240 mm Rear: 120 mm
Expansion Slots	7
Screw bags	Cable tie 80mm: 5pcs MB Stand off 6# 5H 8*4.5L====>10pcs M3*5====>6pcs(2.5"HDD*6) Black screws for side panel M4*5====>8pcs M5*10 TP3====>16pcs(FAN*16)

	6#*4==>27pcs(MB*10,3.5"HDD*13,Power*4)
--	--

## 2. Installation

2-1.1 Open the box



2-1.2 Take out the glass side panels 2-1.3 Take out the chassis



2-2.1 Front case fan installation



1) Fix the fans to the case chassis.

### 2-3. 3.5" HDD installation

Press the HDD into the bracket to fix it



### 2-4. 1 Fan installation on the back side of the HDD bracket



## 2-5.2 Mainboard installation with stand-off am screws



#Additional 3x 3.5" HDD on MB tray



# Additional 3x 2.5" HDD/SSD on MB tray

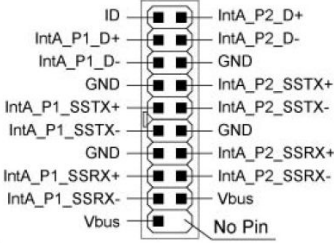
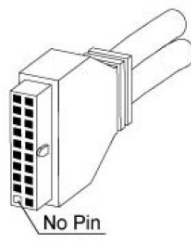
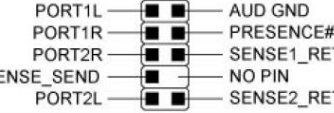

## 2-6 Tempered glasses side panel installation

Align 4 screw holes to washer and fasten screws





## 2. Front I/O Connector

Motherboard	Case cable connector
USB 3.0	
 <p>           ID — IntA_P2_D+            IntA_P1_D+ — IntA_P2_D-            IntA_P1_D- — GND            GND — IntA_P2_SSTX+            IntA_P1_SSTX+ — IntA_P2_SSTX-            IntA_P1_SSTX- — GND            GND — IntA_P2_SSRX+            IntA_P1_SSRX+ — IntA_P2_SSRX-            IntA_P1_SSRX- — Vbus            Vbus — No Pin         </p>	 <p>No Pin</p>
HD Audio	
 <p>           PORT1L — AUD GND            PORT1R — PRESENCE#            PORT2R — SENSE1_RETURN            SENSE_SEND — NO PIN            PORT2L — SENSE2_RETURN         </p>	 <p>No Pin</p>

The product has a two year warranty period from the date of purchase, service issues will be handled by your dealer.

If the case is damaged due to improper operation, the warranty period expires immediately.

Check [www.lc-power.com](http://www.lc-power.com) or contact us by e-mail at [support@lc-power.com](mailto:support@lc-power.com).

Silent Power Electronics GmbH,

Formerweg 8,

47877 Willich,

Germany

