




AIRAZOR

AR-F120RGB

## Installation instruction

### Step 1 - Mainboard connection:

Connect the 3 pin fan cable to the mainboard.  
Consult your mainboard manual to locate the position of the 3 pin fan connector on your mainboard.

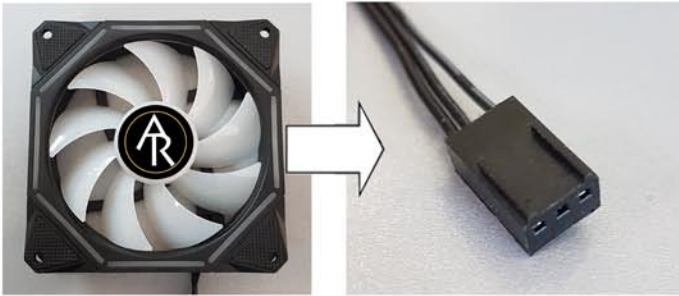

### Step 2 - Mainboard RGB cable connection:

Connect the 3 pin digital RGB fan cable with the mainboard.  
Consult your mainboard manual to locate the position of the RGB connector on your mainboard.  
Colours and modes can be controlled via the mainboard's RGB software (digital RGB/ARGB).



**Note:**

Some mainboards need this digital RGB adapter cable which must be connected between the 3 pin RGB fan cable and the mainboard itself.

